

Pressing the "Preset" button, followed by the number 0 will put the hd camera back to its default (and proper) setting.

Teachers wanting to show their computer screen on the ITV system will press the "content" button to activate and send to your monitor and the remote site monitors. When done, press the content button again.

Pressing the "#" button followed by the "*" buttons (asterisk twice) will bring up on the screen various layouts. Pressing that layout number will change the way you view the remote sites.

To change from HD classroom camera to analog cameras, press the "Near" button followed by the "Camera" Button followed by either "2" or "3" on keypad. (depending on your setup) To change back to HD camera select "camera" again followed by "1" on the keypad.

"Mute" Button
(do not mute unless instructed by teacher to do so.)

